




Details of sample taking device



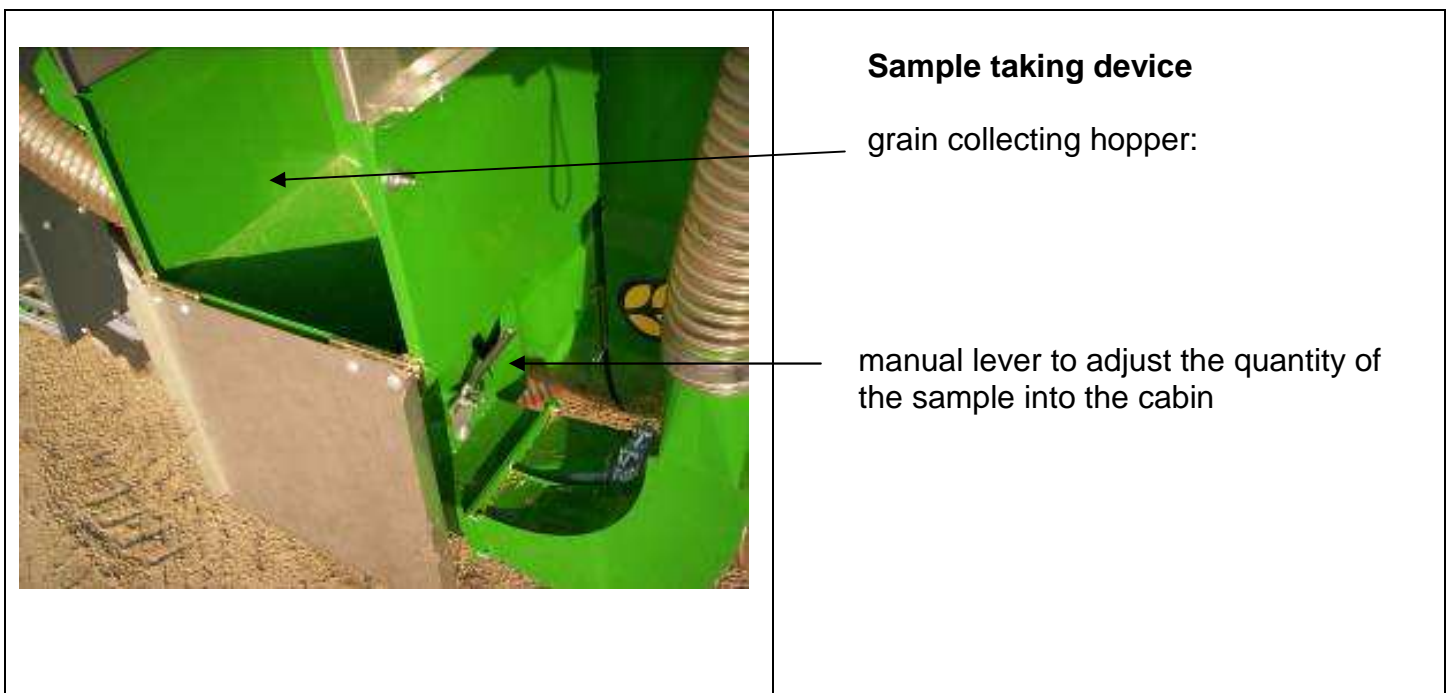

Sample taking device

manual lever to adjust the quantity of the sample into the cabin



Sample taking device


flap for adjusting the quantity of the sample into the cabin

OPTION: Moisture metering system



Stainless steel bucket for controlled flow of material down to the moisture sensor (mounted into the grain collection hopper)

Sensor for moisture metering

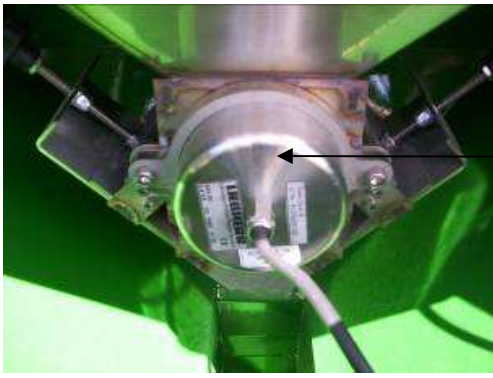

Sensor for moisture metering

The Liebherr **f**ield **m**oisture **s**ensor (FMS) is placed in the sensor hopper under the weighing hopper. It is connected to a serial port of the NOAX computer.

Plot management system:

- for data collection
- for moisture metering
- for plot managing

Cab



Data collecting system ZÜRN DK 800



Electronic weighing system ZÜRN DK 800 with 2 functions:

- weighing plot yields and indication of weight on weighing terminal
- signal outputs for automatic door control (doors of pre hopper and weighing hopper)

(Integrated printer in the weighing terminal.)

Moisture metering system and plot management system



- NOAX industry computer with keyboard
- control unit, power supply